

Velcut / Fashion Velcut

Product Information



Print. Cut. Press.

High Quality Heat Transfer Flock Film for CAD Cutting

Velcut and Fashion Velcut are a high quality heat-sealable flock film designed specifically for plotter cutting. The material is easy to cut and peel and is available in a wide variety of colours. Fashion Velcut is pre-printed with designs using top quality sublimation processes that give great full colour fastness.

Velcut

Packaging:

- Rolls of 10 metres - width: 50cm or 100cm
- By the metre - width: 50cm

Composition:

- *Base:* Hotmelt polyurethane film
- *Adhesive:* Synthetic resin, acrylic
- *Flock:* Rayon-Viscose
- *Total weight:* approx 190 g/sqm

Application to material:

- Cotton
- Polyester
- Polyester/cotton
- Lycra



Fashion Velcut

Packaging:


- Rolls of 10 metres - width: 50cm
- By the metre - width: 50cm

Composition:

- *Base:* Hotmelt polyurethane film
- *Adhesive:* Polyurethane, 75-80g/sqm
- *Flock:* Polyester microfibre, 45g/sqm
- *Total weight:* approx 190 g/sqm

Application to material:

- Cotton
- Polyester
- Polyester/cotton
- Lycra

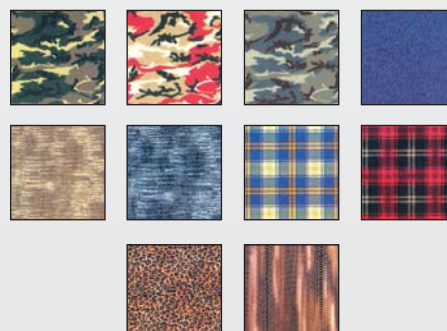

Velcut / Fashion Velcut

Application Instructions



Print. Cut. Press.

Temperature: 160°C

Pressure: Moderate

Application Time: 12 - 15 seconds

Application Sequence:



Follow these steps for a perfect press!

1. Place the garment on the heat press so that it is sitting flat and straight. Place a cloth over areas such as buttons and zippers to avoid heat marks. Take care to ensure that pressure will distribute evenly when pressing near these raised surfaces.
2. Perform a pre-press using the settings listed above to ensure the garment is dry and primed for the proper press.
3. Place the transfer in the desired position on the garment, taking care to ensure no bubbles or wrinkles form underneath.
4. Commence the press. Once completed, rub the transfer over with a cloth for a few seconds and allow sufficient time for the transfer to cool before removing the carrier backing.

Troubleshooting:

- Q.** *The transfer is not sticking onto the garment properly!*
- A.** Not enough pressure is being applied / temperature is set too high or low / garment is not dry. Try a few sample presses.

Please Note: While we try our best to provide accurate information, please be aware that textiles vary in their material compositions and all heat presses differ slightly in their pressure and temperature settings. Always order more transfers than you need and perform a couple of sample tests before you commence your proper pressing run.