



Puff adds dimension to the transfer AFTER it's been pressed. Weed a regular flat transfer, then add heat and reveal a 3 dimensional, raised transfer. Puff literally 'puffs' up once heated.

RECOMMENDED FABRICS

- Cotton
- Polyester
- Cotton/Polyester Blends

Please note: Always check fabric makeup and test press when possible.

TECHNICAL INFORMATION

Thickness: 105 (160) Microns

Finish: Matte, Puffed

Carrier: Medium Tack

WASHING INSTRUCTIONS

- Avoid washing in the first 24 hours
- No higher than 40°C
- Do not dry clean or tumble dry
- Hang dry inside-out
- Avoid over exposure to direct sunlight

FOR USE WITH

- Commercial Heat Press
- Vinyl Cutter
- Weeding Tool


CUTTING NOTES

Blade: Standard Cutting Blade (45°)

Pressure: From 60g (New blade)

Recommended cut size: 5mm Text (for fast weeding)

Please note: Always test cut prior to any production. Remember cutter settings will need to be adjusted between products and as your blade ages.

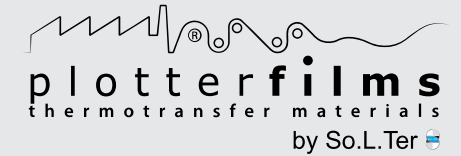

APPLICATION INSTRUCTIONS

Temperature: 150°C

Time: 10 seconds

Pressure: High / 60-70psi / 5bar / #7-8 on Hotronix

Peel: Hot (Immediate)